


1: Fix the hanging board to the wall

3: Fix the wall box and hanging board from the side

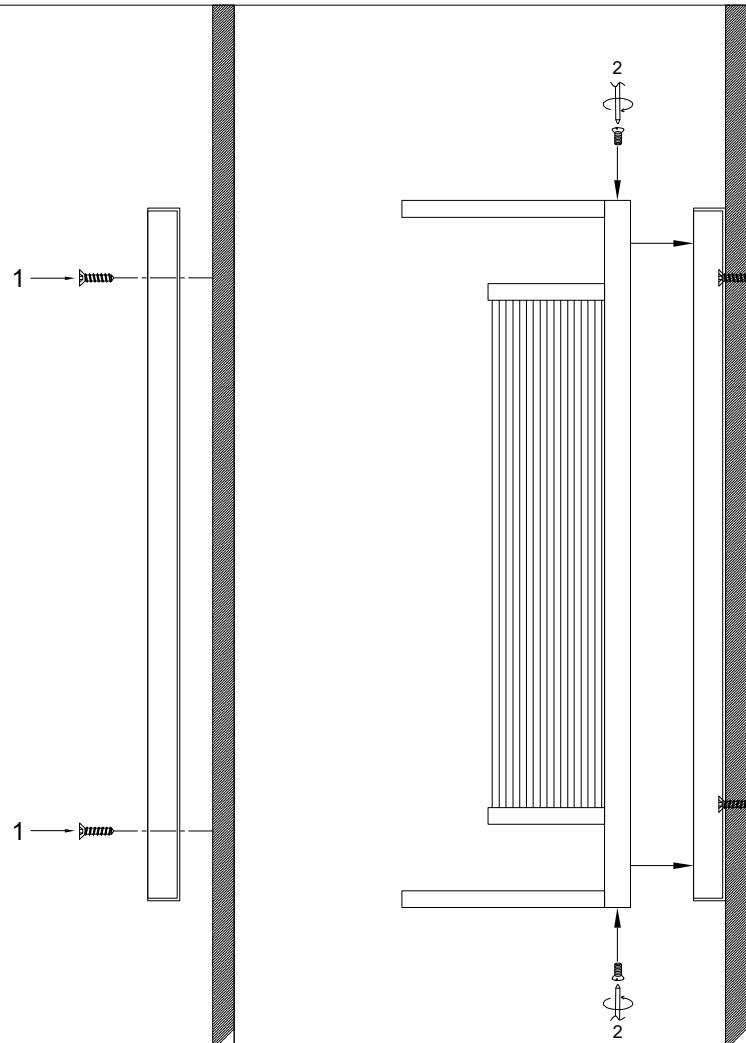

Function Description of Solar Remote Control

- 1: Please remove the transparent spacer before using the remote control
- 2: After installing the lighting fixtures press the "ON" button once at night to activate the lights, and then press it every day It will automatically turn on when it gets dark. (daytime activation requires pressing 3 times, the light flashes 2 times and then goes out)
- 3: Other functions cannot be remotely controlled during the day and can only be remotely controlled at night:
- 4: The timed lighting is only valid for the current operation and when the light is turned off and turned on again it will restore the silent state Recognition mode

