




1

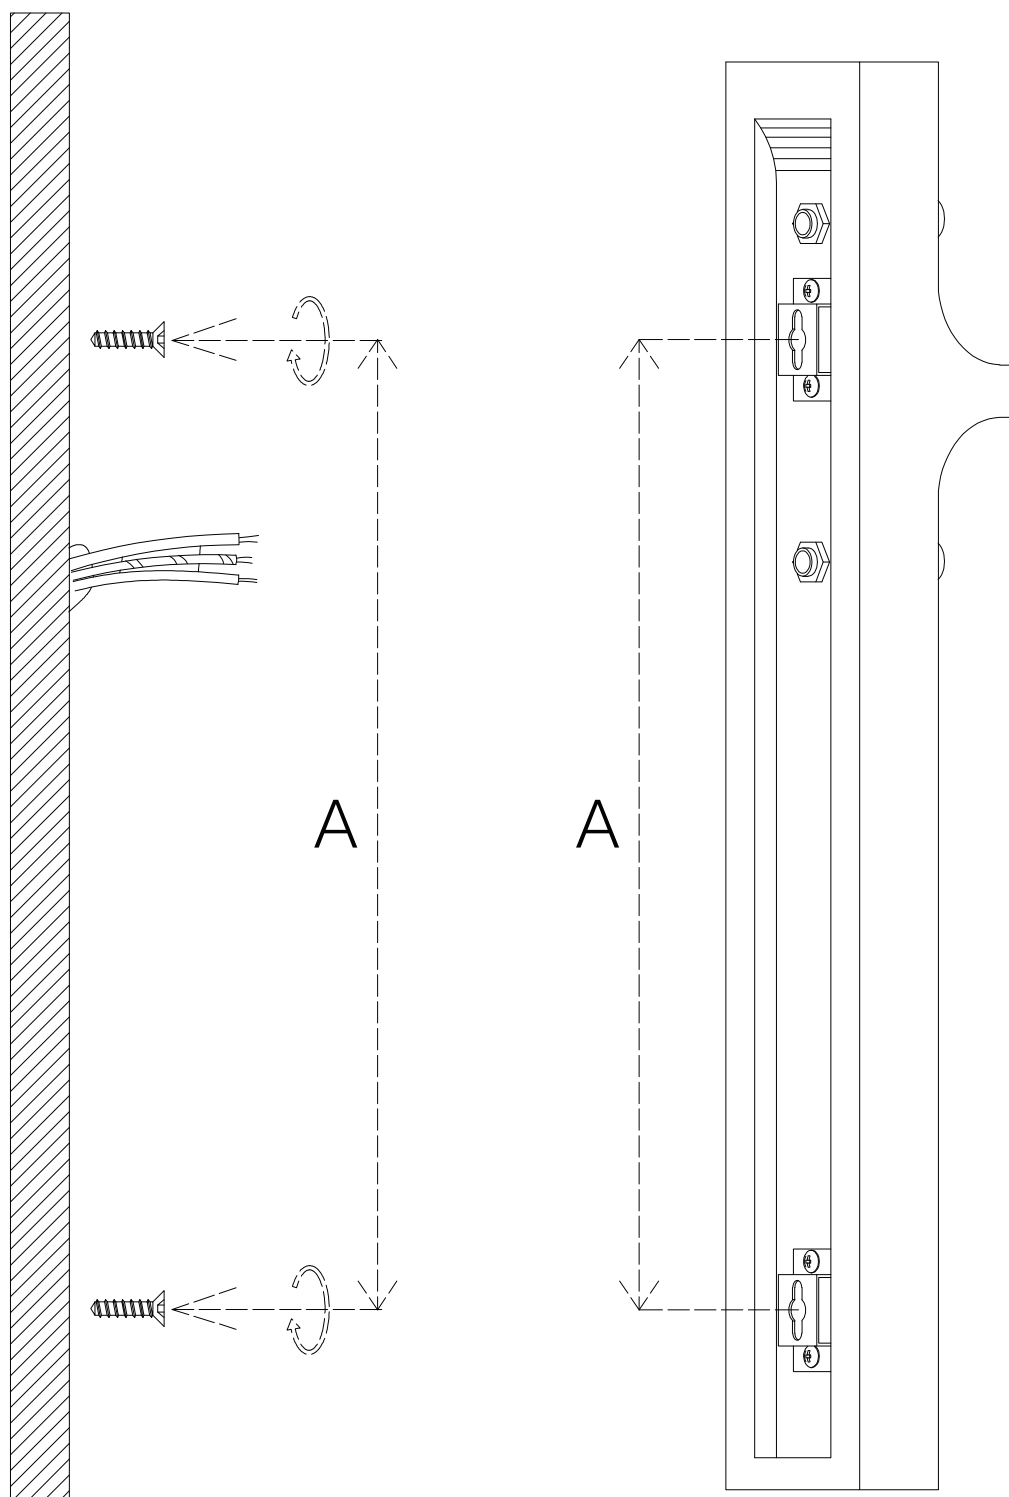

2

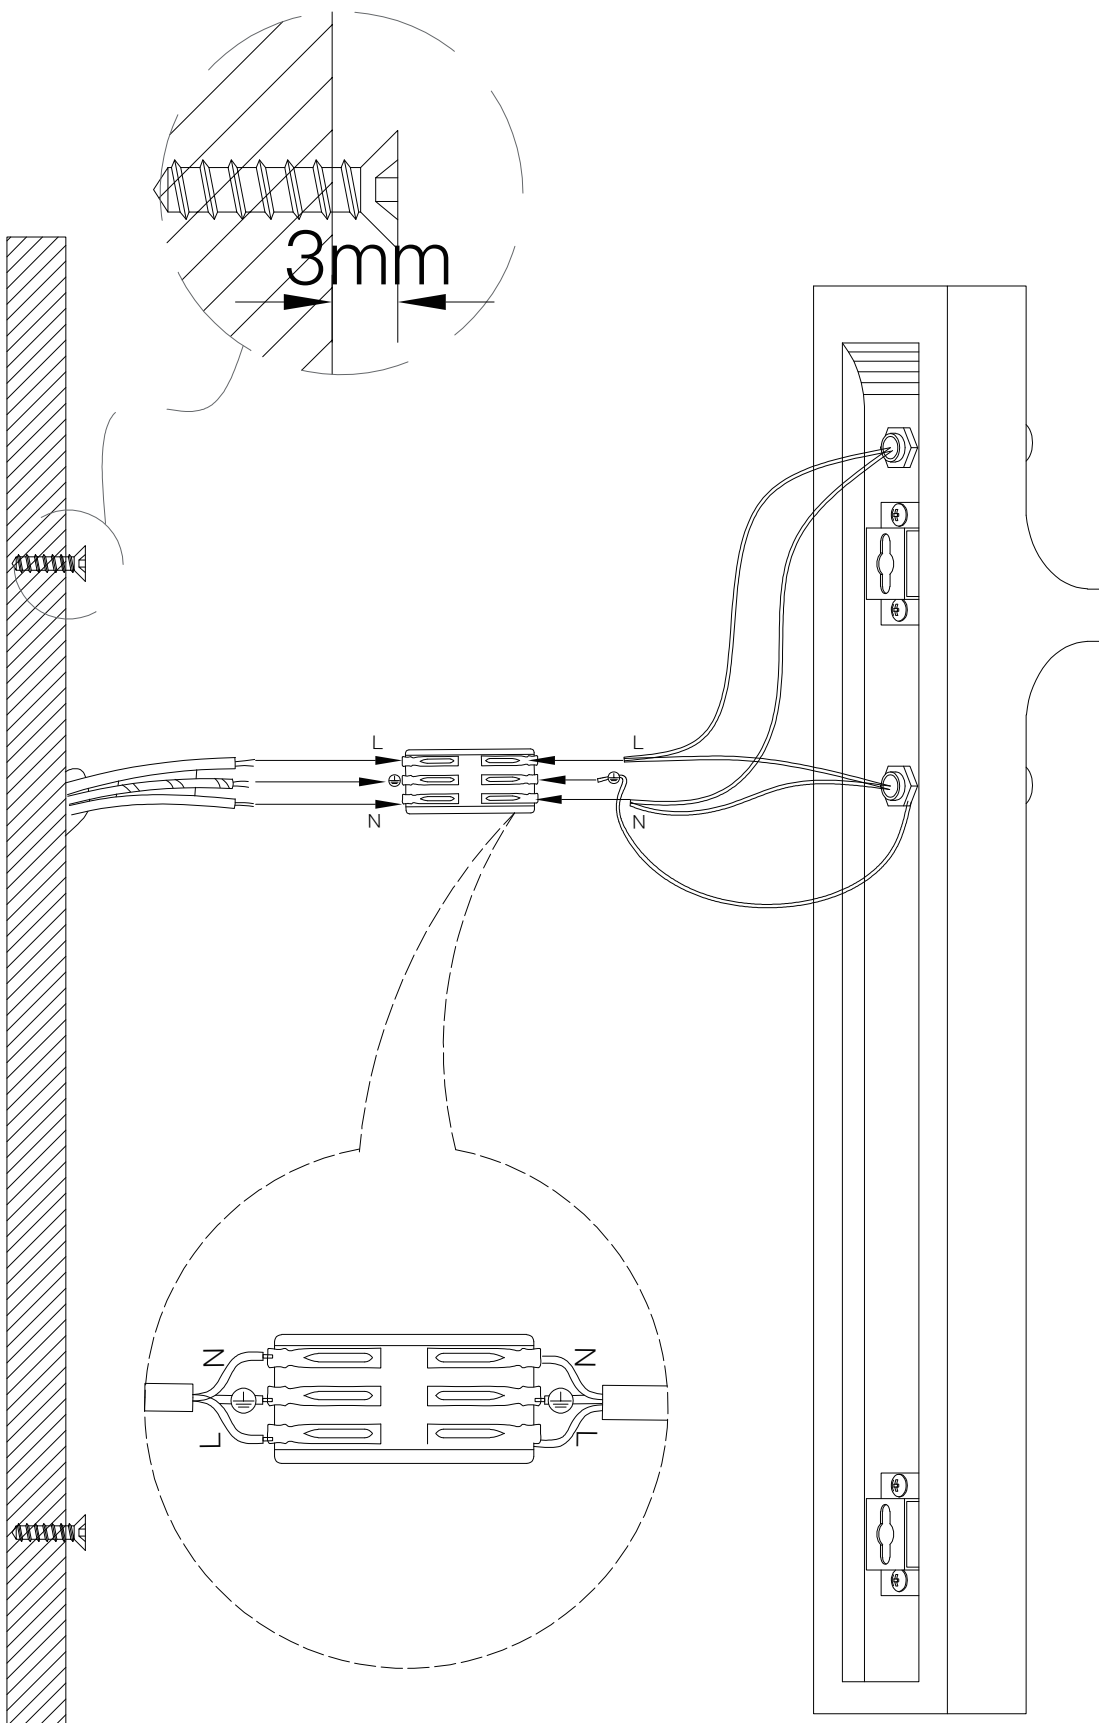

3

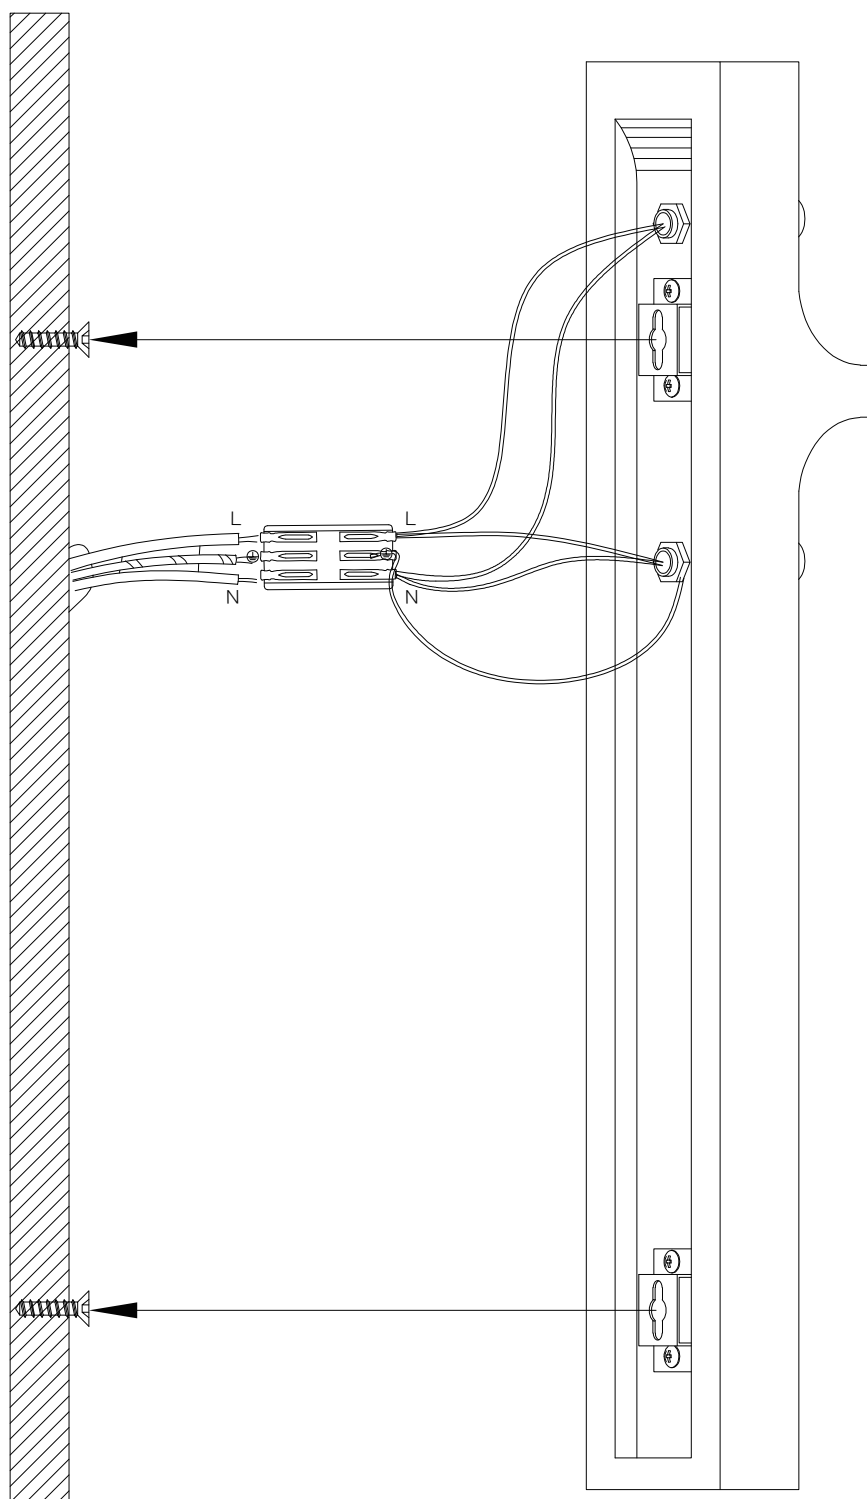

Align the screw cap with the hole and insert it close to the wall.

