
Open the origina carton and verify the following items

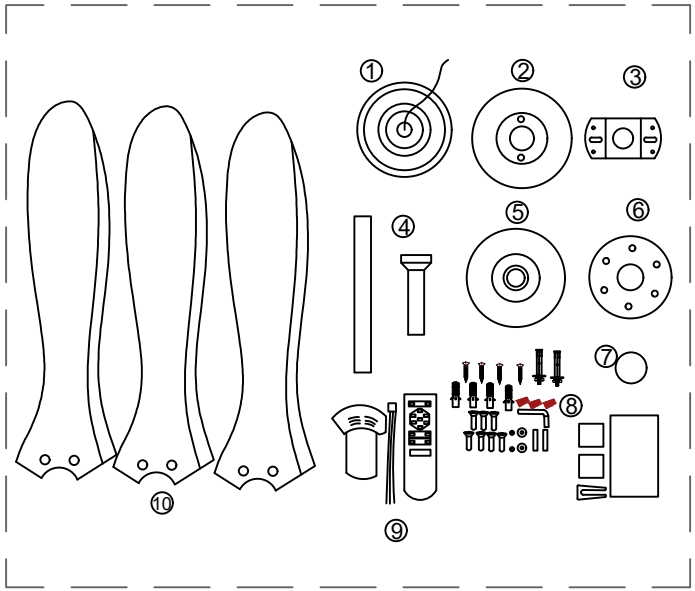

1:1 x Motor Assembly
2:1 xCanopy
3:1 x Mounting Plate
4:2 x Downrod
5:1 x Coupling Cover
6:1 x Blade holder
7:1 x Bottom cover

8:4 x Wooden screw
2 x Explosive screw
7 x Fan blade mountingscrew
1 x Balance package
1 x inner hexagon spanner
3 xP2 connection cap
4 x House lizard
2 x Machine screw
2 x Spacer

9:1 x Remote control 1 x receiver

10: 3 x Flabellum

1:Aign the blade screw through blade holder ring and blade with motor assembly's hole,tighten 2screws halfway,after install all 3blades then tighen 6 screws firmly

2:Screw the bottom cover into the motor shaft

