

1


1




A-rod with nut and spacer




The B bar has a cap on top

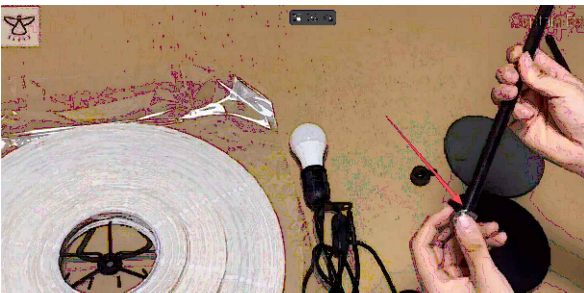


The A rod is passed into the round hole of the chassis and tightened with a nut

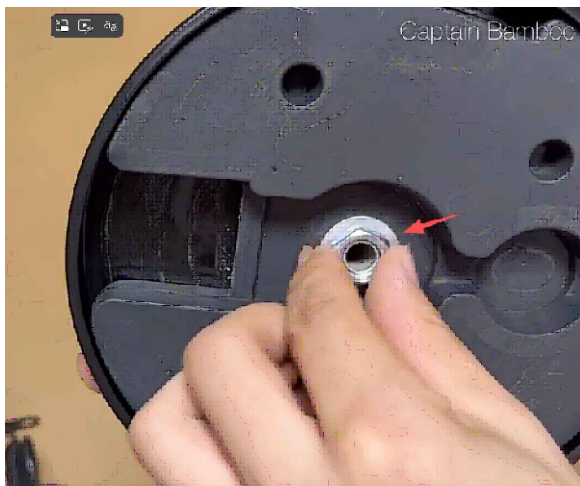


The stopper is threaded into the A bar with the groove side down

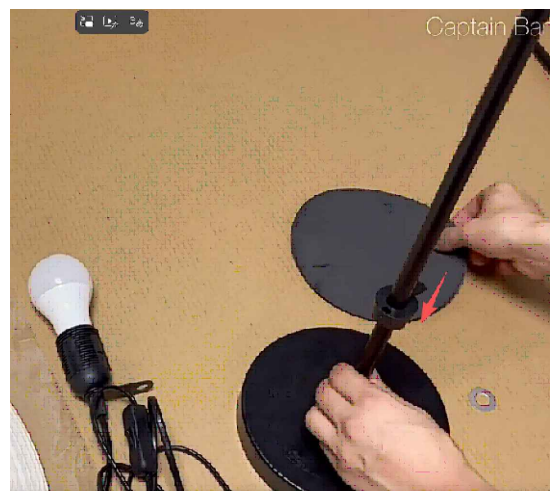


2

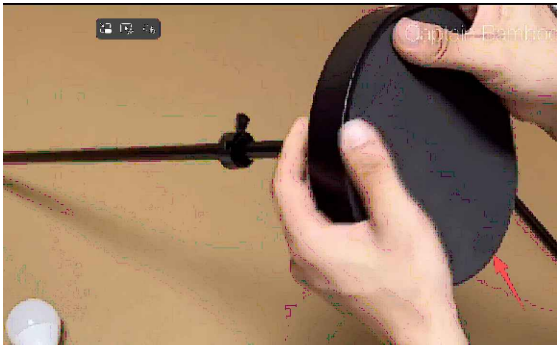

Attach the spacers

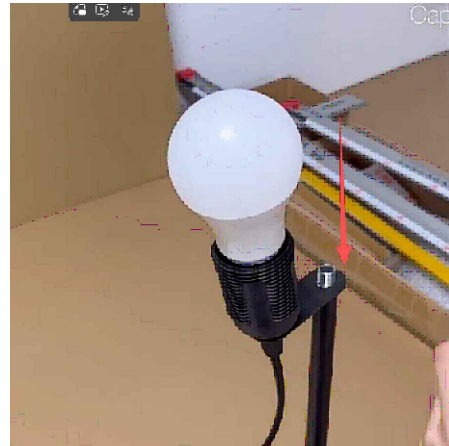

The lamp head is threaded into the screw at the upper end of the A rod

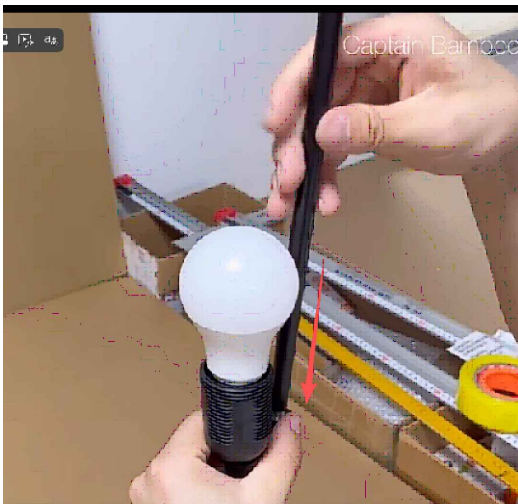

Twist into the B bar to secure the lamp head




Put the lampshade on the upper end of the B bar


3



Put the metal beam at the lower end of the lampshade into the card slot of the stopper

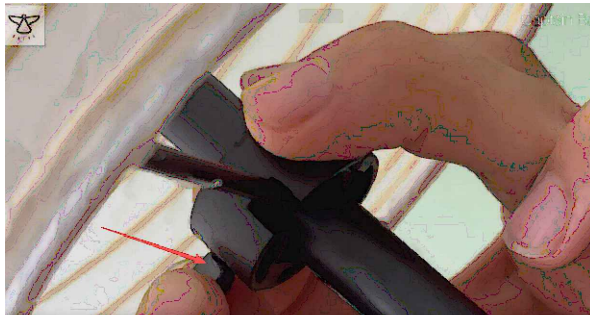

Pull down the lampshade and tighten the stopper to fix

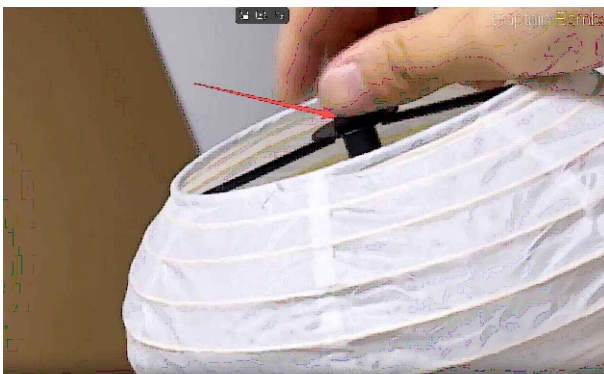

The cap at the upper end of the B bar is reattached to secure the lampshade