


1



2

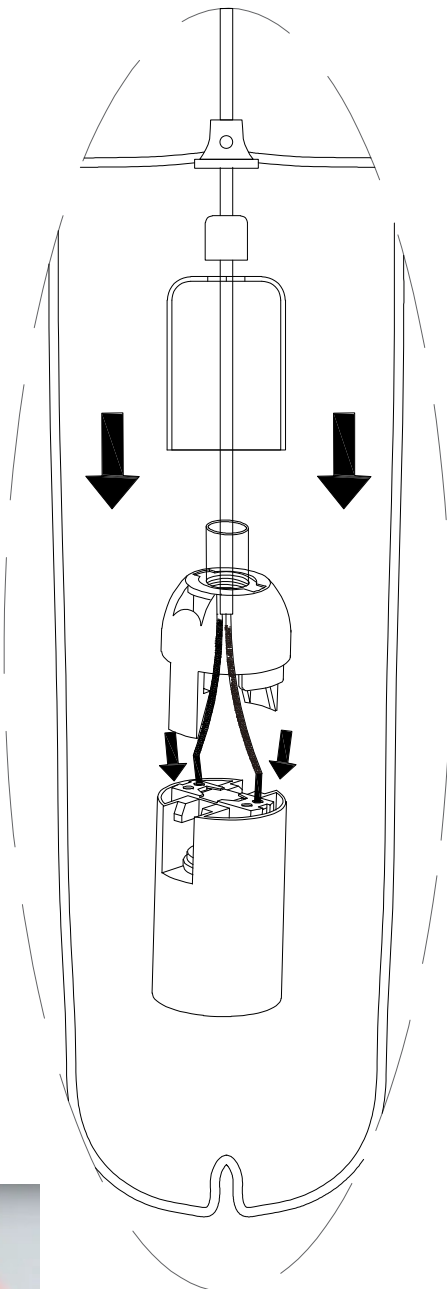

Please note:

To ensure correct installation, please follow these connection guidelines:

- Connect the black wire to hole number 2.
- Attach the white wire to hole number 3.

